

No:	SB144-13	Issue:	1
Date:	27/08/13	Sheet:	Page 1 of 1

SUBJECT: Air Suspension Ride Heights

It is extremely important that during the routine six weekly service inspections the vehicle ride heights are checked and adjusted if required, as described in the Elite 2 (Euro 5) repair manual.

Front Air Assist

Ride Height: 620mm
Repair Manual Reference: Section 63.9

Single Drive Axle (HA4)

Ride Height: 62mm-63mm
Repair Manual Reference: Section 64.9

Tandem Drive Axle (HA8) 8x4 Only

Ride Height: 72mm
Repair Manual Reference: Section 66.8
Please note the ride height on the 8x4 chassis fitted with the HA8 suspension can only be checked, by measuring the distance between the top axle pad and the bump stop on the rear-most drive axle. If adjustment is required, it must be carried out by a licenced Wabco engineer.

Failure to maintain the ride heights will affect the performance of the vehicle and the accuracy of any load indicator system linked into the air bags.